HOME
DECORATORS
COLLECTION

BF-25173 MARTHA STEWART LIVING MUDROOM MESSAGE CENTER 19″Hx40″Wx7″D

INV#19148

ASSEMBLY INSTRUCTIONS

Made In China

Max Load : 30LB.

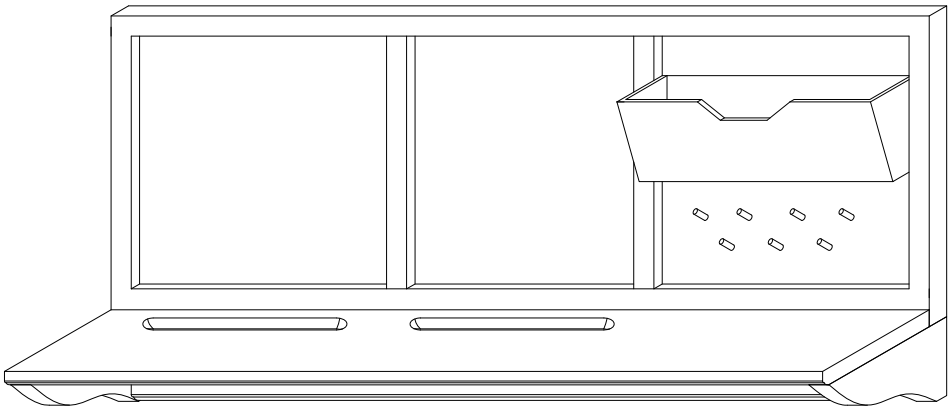

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST

A 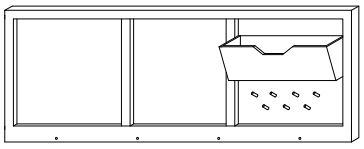 LARGE BACK PANEL-1PC	B  ACROSS PANEL-1PC	C  SMALL BACK PANEL-1PC
D  LEFT SIDE PANEL-1PC	E  RIGHT SIDE PANEL-1PC	F CAM-TOOL-1PC
G  CAM-BOLTS-5PCS	H CAM-LOCKS-5PCS	I 11mm × 2"  BOLTS-8PCS
J  ALLEN WRENCH-1PC	K  DOWELS-2PCS	L POTHOOKS-4PCS

M 6mm × 1/2"  SCREWS-8PCS	N  SHEETIRONS-2PCS	O 6mm × 5/8"  SCREWS-10PCS
P 8mm × 1-1/2"  SCREWS-10PCS	Q  GECKOS-10PCS	R EVA PADS-2PCS

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

NOTE: ● UPON OPENING THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

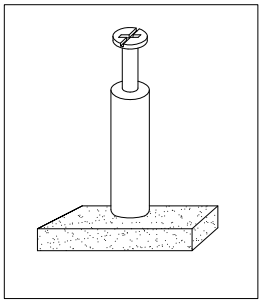

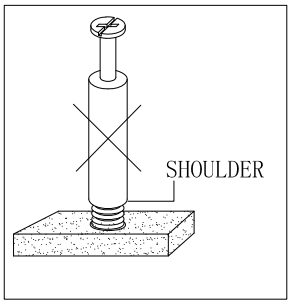

NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

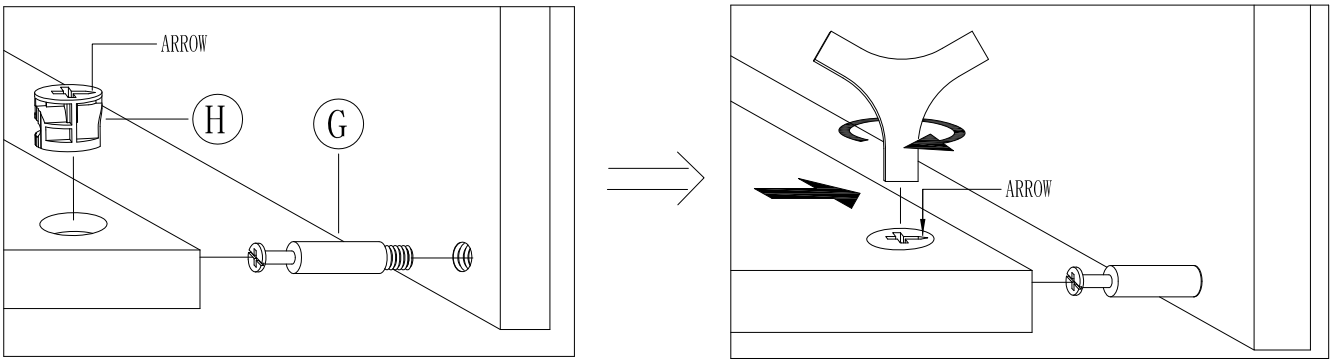

NOTE: ● THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

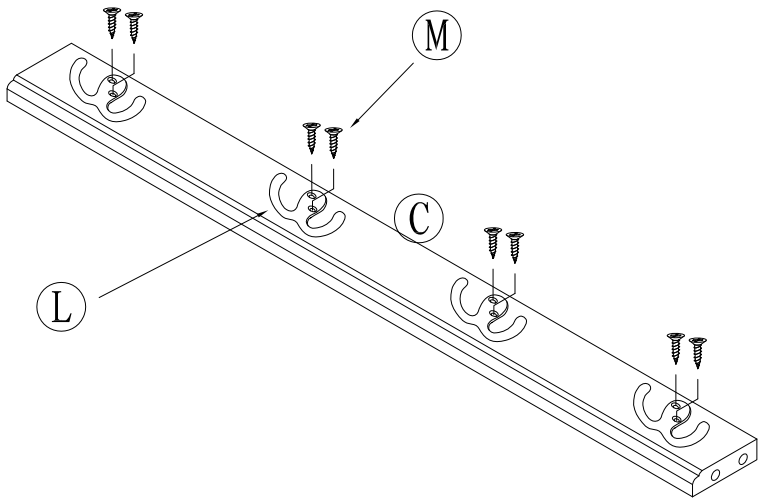

1). ASSEMBLE THE POTHOOKS(L).

- ATTACH THE POTHOOKS(L) TO SMALL BACK PANEL(C) USING 8 SCREWS(M).

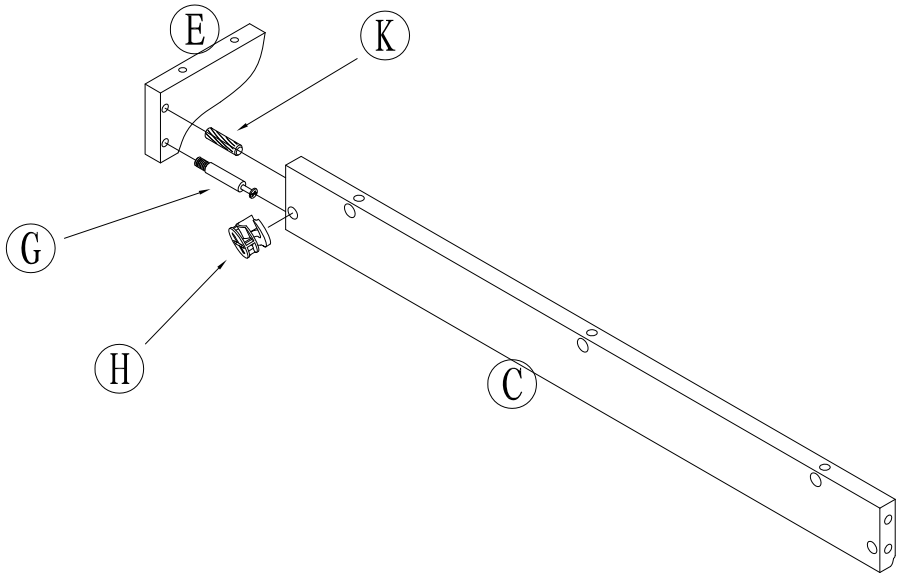

2). ASSEMBLE THE RIGHT SIDE PANEL(E).

- ROTATE 1 CAM-BOLT(G) AND INSERT 1 DOWEL(K) INTO THE HOLE IN THE RIGHT SIDE PANEL(E).
- PLACE CAM-BOLTS(G) INTO THE HOLE IN THE SMALL BACK PANEL(C) AND ATTACH USING 1 CAM-LOCK(H).

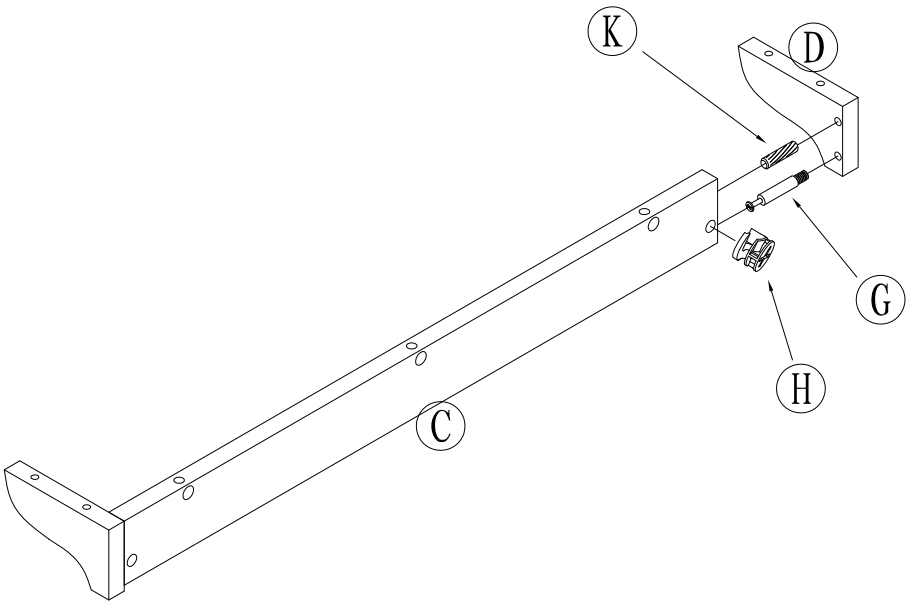

3). ASSEMBLE THE LEFT SIDE PANEL(D).

- ROTATE 1 CAM-BOLT(G) AND INSERT 1 DOWEL(K) INTO THE HOLE IN THE LEFT SIDE PANEL(D).
- PLACE CAM-BOLTS(G) INTO THE HOLE IN THE SMALL BACK PANEL(C) AND ATTACH USING 1 CAM-LOCK(H).

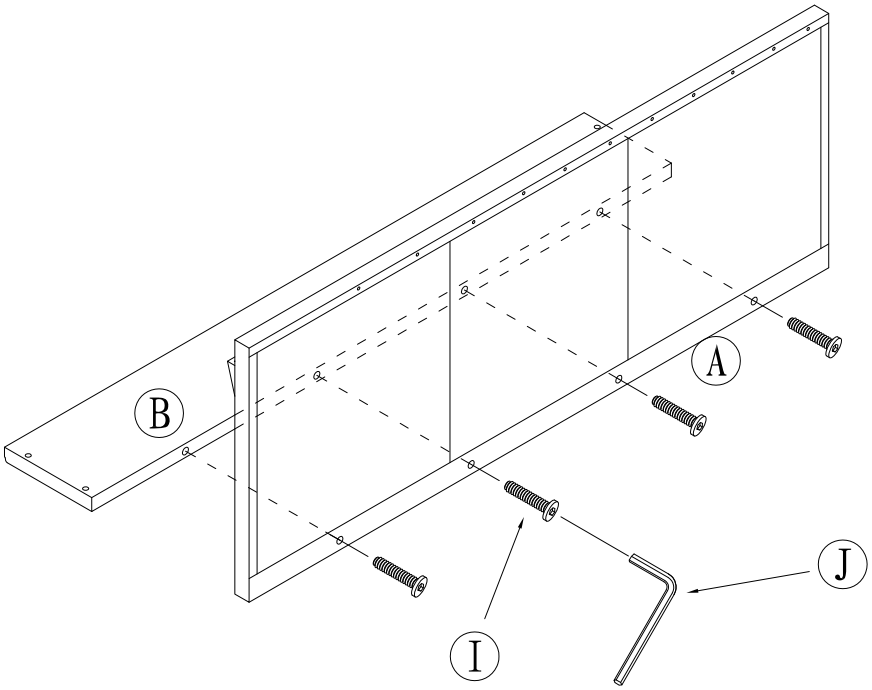

4). ASSEMBLE THE ACROSS PANEL(B).

- ATTACH THE ACROSS PANEL(B) TO LARGE BACK PANEL(A) USING 4 BOLTS(I).

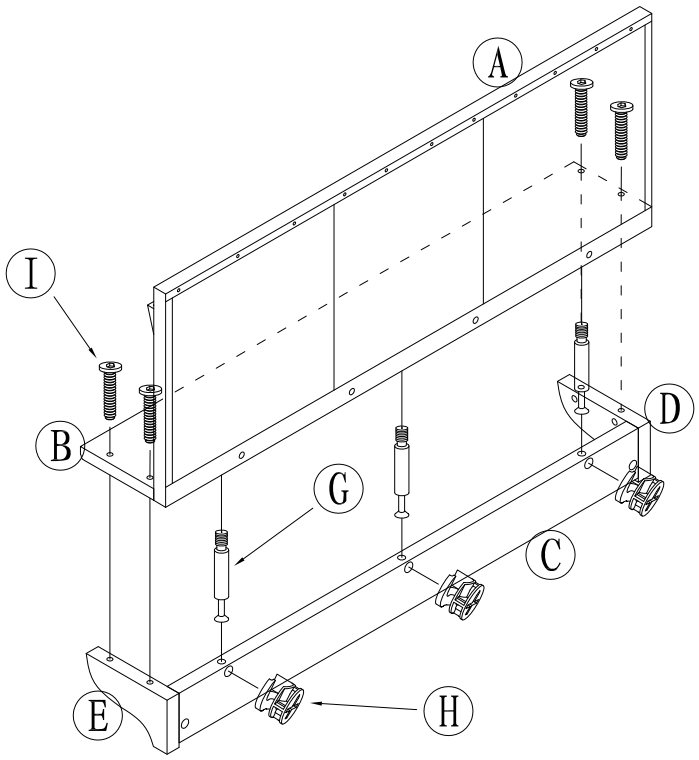

5). ASSEMBLE THE PANEL(A/B).

- ROTATE 3 CAM-BOLT(G) INTO THE HOLES IN THE LARGE BACK PANEL(A).
- PLACE CAM-BOLTS(G) INTO THE HOLES IN THE SMALL BACK PANEL(C) AND ATTACH USING 3 CAM-LOCK(H).
- ATTACH THE ACROSS PANEL(B) TO SIDE PANEL(D/E) USING 4 BOLTS(I).

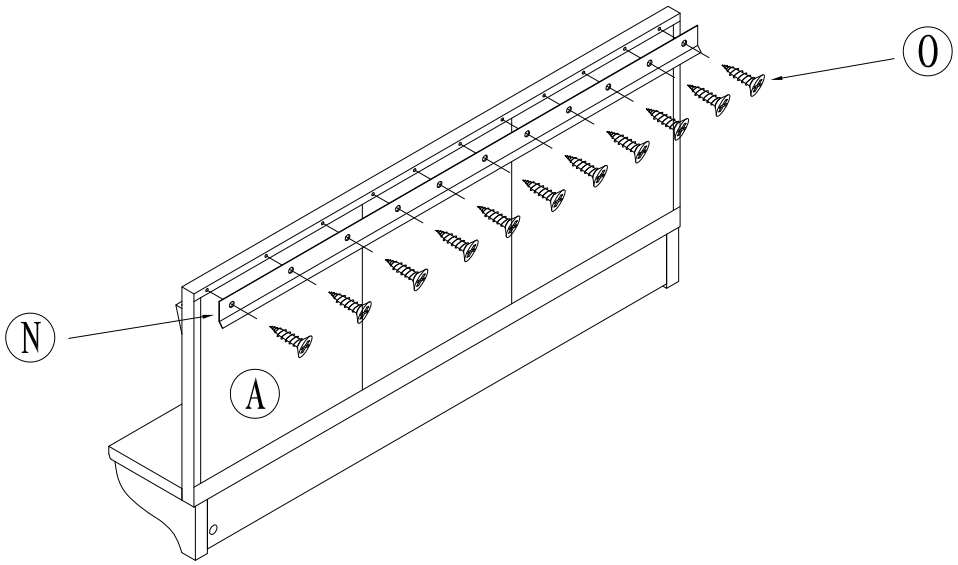

6). ASSEMBLE THE SHEETIRON(N).

- ATTACH THE SHEETIRON(N) TO LARGE BACK PANEL(A) USING 10 SCREWS(O).

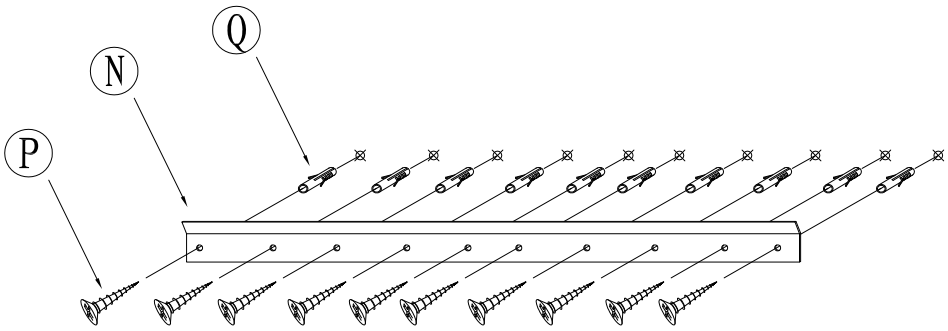

WALL

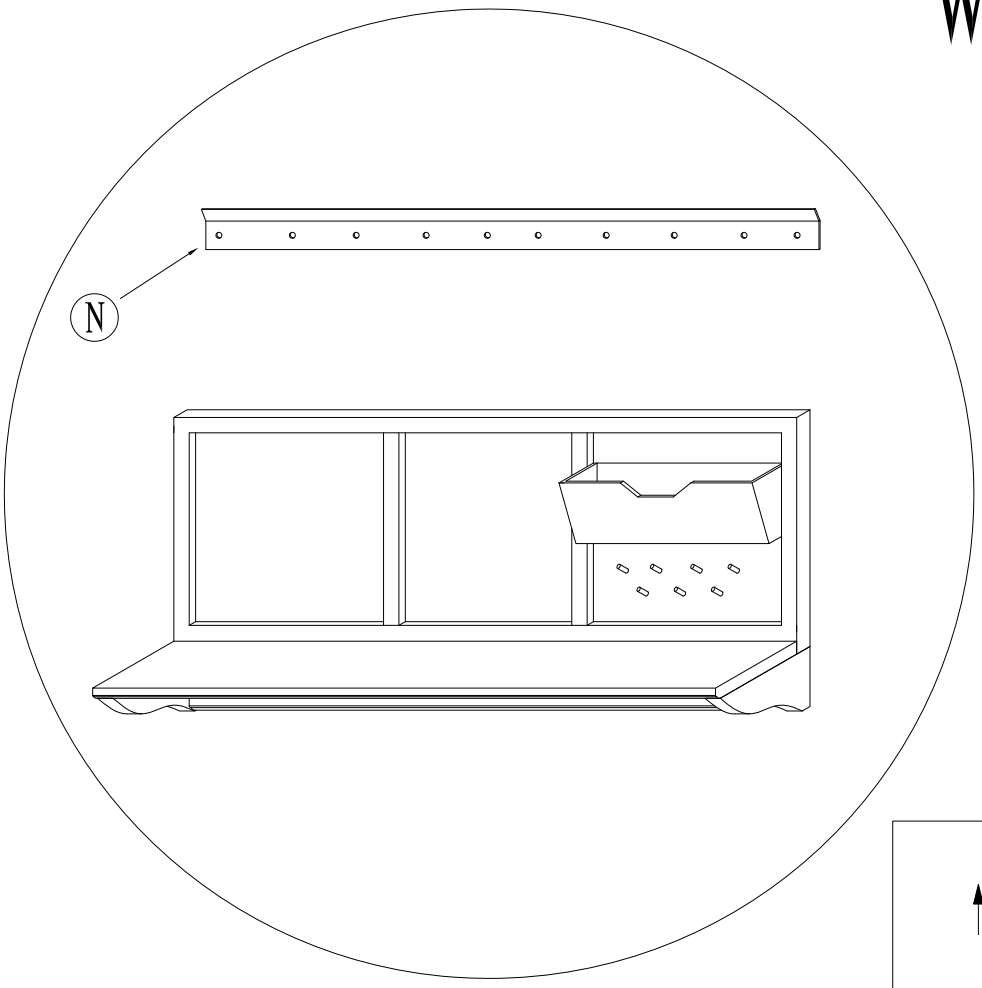

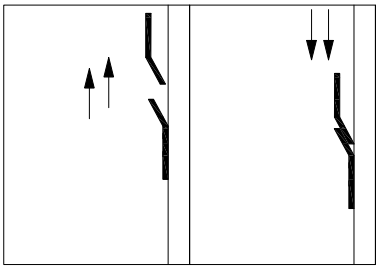

7). ASSEMBLE THE GECKOS(Q).

- DRILL 10 HOLES INTO THE WALL, PLEASE REFER TO THE REAR BACK PANEL'S HOLE DISTANCE AND HEIGHT.
- TAP 10 GECKOS(Q) INTO THE HOLES ON THE WALL. THEN ROTATE 10 SCREWS(P) INTO THE GECKOS(Q).
- HANG THE CABINET ONTO THE SHEETIRON(N).